


# **QUICK GUIDE**

#### **EE046 - Condensation Monitor**

This quick guide provides some information on EE046 connectivity as well as status indication and relay controlled output.

Please note: The mounting location shall be selected very carefully. Crucial is always the least favourable site, usually the one with the highest humidity.


### **Connection Diagram / Status Indication**

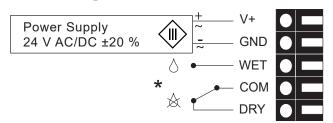

\* ★ Relay status for power on and RH < Threshold.</li>
△ The relay falls to "WET" for RH > Threshold or power off.

LED ON: no condensation danger LED flashes: condensation danger LED OFF: power supply off / failure

### **Relay Function**

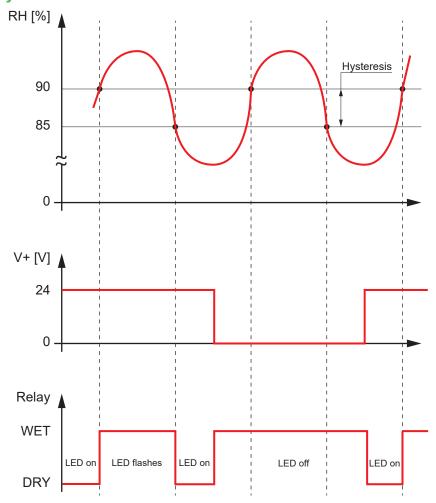

## **INFORMATION**

+43 7235 605 0 / info@epluse.com

E+E Elektronik Ges.m.b.H. Langwiesen 7 • A-4209 Engerwitzdorf Tel: +43 7235 605-0 • Fax: +43 7235 605-8 info@epluse.com • www.epluse.com

LG Linz Fn 165761 t • UID-Nr. ATU44043101 Place of Jurisdiction: A-4020 Linz • DVR0962759



